


02 Edit flow measurements

Edit flow measurements

Flow Measurement Data

Flow measurements can be added with 'flow measurement data' function from the 'Edit and Entry' function map. The data entered or edited will not be stored in the HYMOS database but in separate files (extension *.flw).

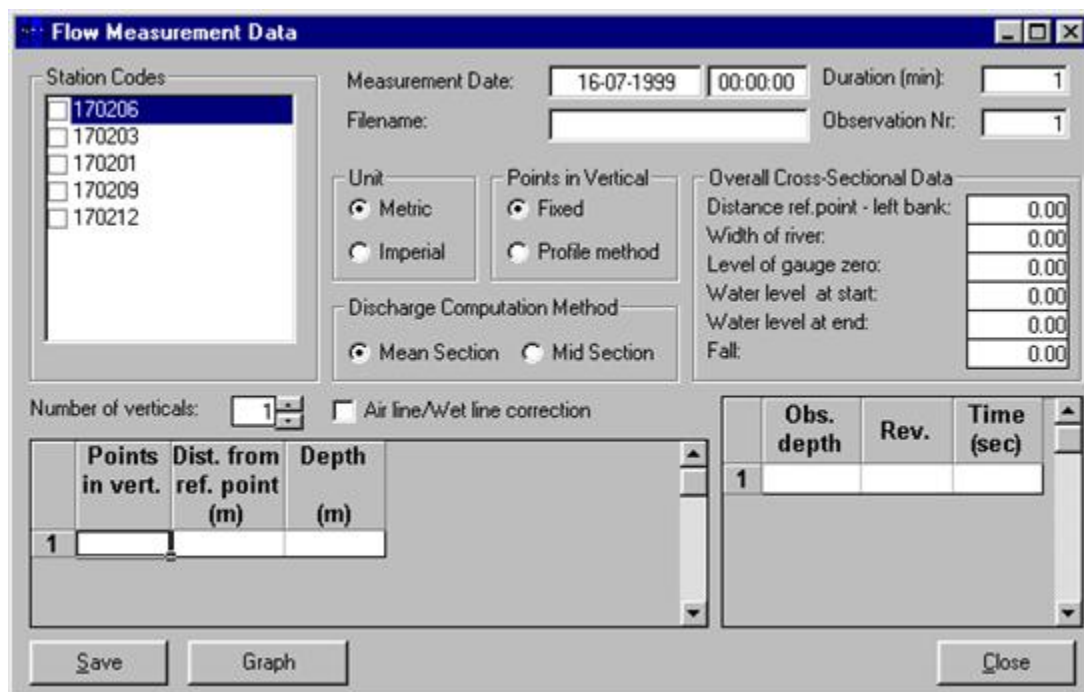

The dialog box 'Flow Measurement Data' contains the following fields and controls:

- Station Codes:** A list box with checkboxes for 170206, 170203, 170201, 170209, and 170212.
- Measurement Date:** Two text boxes for date (16-07-1999) and time (00:00:00).
- Duration (min):** A text box with the value 1.
- Filename:** A text box.
- Observation Nr:** A text box with the value 1.
- Unit:** Radio buttons for Metric (selected) and Imperial.
- Points in Vertical:** Radio buttons for Fixed (selected) and Profile method.
- Discharge Computation Method:** Radio buttons for Mean Section (selected) and Mid Section.
- Overall Cross-Sectional Data:** A group of text boxes for Distance ref. point - left bank, Width of river, Level of gauge zero, Water level at start, Water level at end, and Fall, all with a value of 0.00.
- Number of verticals:** A text box with the value 1.
- Air line/Wet line correction:** A checkbox.
- Table 1:** A table with columns 'Points in vert.', 'Dist. from ref. point (m)', and 'Depth (m)'. It contains one row with the value 1 in the first column.
- Table 2:** A table with columns 'Obs. depth', 'Rev.', and 'Time (sec)'. It contains one row with empty fields.
- Buttons:** Save, Graph, and Close.

The entered data includes:

- Measurement date and time
- Duration of measurement in minutes
- Observation Number
- Unit: metric or imperial
- Computation of total flow: mean section method, or mid-section method
- distance from reference point
- width of river
- level of gauge zero
- water level (rel. to gauge zero) at start of measurement
- water level at end of measurement
- water level difference with downstream station, only required if backwater correction is required, else 0.
- vertical number, distance from reference point and water depth
- measuring depth, number of rotations duration of single point measurement
- airline length, vertical angle, horizontal angle

To edit an existing flow measurement file, double-click on the filename text box and select a file with the windows file open dialogue.

Add a flow measurement by filling in the text boxes and making your selection concerning the discharge computation method and units. Enter the number of verticals and per vertical the number of measuring points. After entering all values give a filename and press <Save> to save your data.

Types of measurements

HYMOS can treat two types of flow measuring methods:

- point velocity method
- moving boat method.

In both cases average velocities in a number of verticals in the cross-section are computed. From these velocities the discharge is computed by:

- mean-section method
- mid-section method.

The computational results are presented in tables and graphs. The condensed results can be stored in the database.

Mean and mid-section methods

The flow velocity is measured in verticals at distances w_i , $i=1, m$ from a reference point on the river bank. The water depth at vertical i is denoted by d_i and the average flow velocity in that vertical by v_i , see the underneath figure.

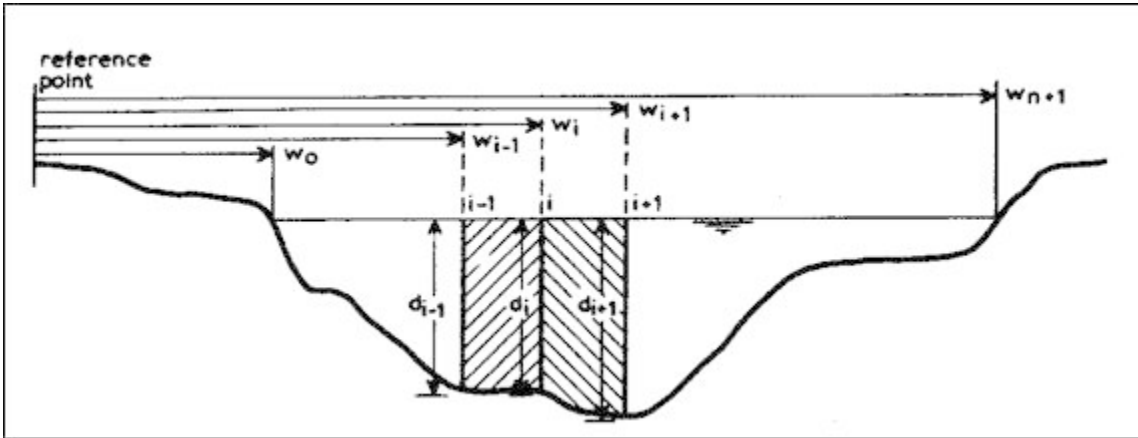


Figure 8.1: Definition sketch

Discharge computation

The discharge q_i in section $i-1$ to i is computed from:

- Mean-section method:
- Mid-section method:

for $i=1, n+1$, with:
 $d_0 = d_{n+1} = 0$

The total discharge then follows from:

If the water levels at the beginning and at the end of the measurements are denoted by h_1 and h_2 respectively, then the representative water level h_Q is computed from:

- if $|h_1 - h_2| < 0.05$ by: $h_Q = \frac{1}{2} (h_1 + h_2)$
- if $|h_1 - h_2| \geq 0.05$ by:

To estimate the average velocity v_i in a vertical in the cross-section from point measurements v_p at p * flow depth, following methods are available in hmos: (iso748 and iso/tr7178):

1. one-point method:
2. two-point method:
3. three-point method:
4. four-point method:

5. five-point method:

6. six-point method:

7. profile method, see Figure

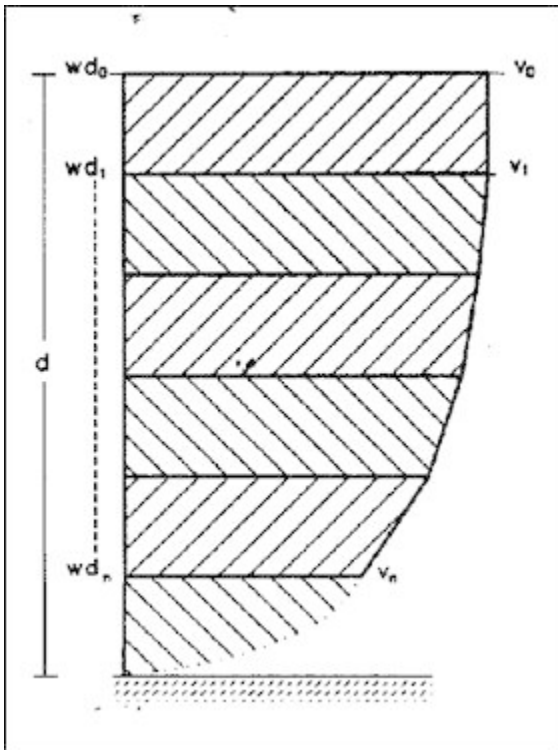


Figure 8.2: profile

The last term in the equation assumes an extrapolation of the velocity profile to the bottom according to the power profile

Air- and wet-line correction

hymosallows you to include air- and wet-line corrections in case the depths are measured with a wire, see figure.

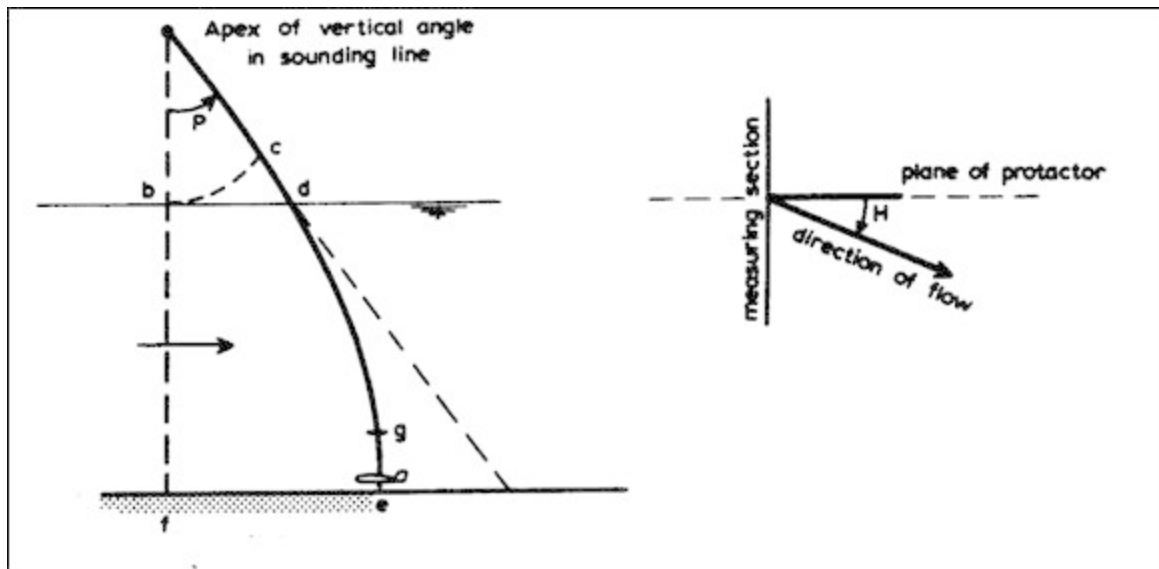


Figure 8.3: Air- and wet-line correction

The air-line correction cd is computed from:

$$cd = ab (\sec(P) - 1)$$

where:

ab = air-line length

P = vertical angle in the sounding line

The vertical angle P is adjusted to the true vertical angle X in case the plane of the protactor makes a horizontal angle H with the direction of the flow according to:

$$X = \arctan(\tan(P)/\cos(H))$$

The wet-line correction ge is expressed as a percentage a of the wet-line length de according to iso748-1979 (E) Annex C Table 2. So the true depth bf follows from:

$$bf = (ce - cd) (1 - a/100)$$

Moving boat method

In the moving boat method the combined boat- and river velocity is measured. To compute from this the actual river velocity either the angle between the current meter and the section line or the boat velocity is measured additionally.

Following methods are distinguished to compute the stream velocity in vertical i :

- $v_i = v_{v,i} \cdot \sin a_i$
- $v_i =$

where:

v_i = point velocity in vertical i

$v_{v,i}$ = combined boat and stream velocity

a_i = angle between current meter and section line

$v_{b,i}$ = boat velocity at vertical i

The stream velocity is measured at a constant depth wd below the water surface. This velocity is transformed into the average velocity in the vertical by assuming a power law velocity profile:

with:

$\bar{v}_i$ = average stream velocity in vertical i
 c = power of power law velocity profile (5 £ c £ 7)
 d_i = flow depth at vertical i
 wd = current meter depth

Width adjustment

Since the sum of the segment widths B_c may deviate from the actual river width B_m the computed segment widths are adjusted by the ratio B_m/B_c in the calculations.

Layout of files

The Layout of the flow measurements file (.flw) is as follows

Line 1

Position

01 - 03 number of the measurement

04 - 07 year (yyyy) +

09 - 10 month (mm) +date of measurement

12 - 13 day (dd) +

15 - 16 hour (hh) +time of measurement at start

18 - 19 minute (mi) +

20 - 22 duration of measurement in minutes

25 unit: metric(0) or imperial(1)

28 type of measurement:

1-6 = point measurements according to ISO standard, where the type number corresponds with the number of points in the vertical

7 = point measurements with free distance between points in the vertical (number of points £10)

8 = moving boat: method vv-a

9 = moving boat: method vb-vv

31 comp. of total flow: 1= mean section method, or

2= mid-section method

Line 2 - Point velocity measurements (type £ 7).

Position:

01 -08 distance from reference point

09 -16 width of river

17 -24 level of gauge zero

25 -32 water level (rel. to gauge zero) at start of measurement

33 -40 water level at end of measurement

41 -48 water level difference with downstream station, only required if backwater correction is required, else 0.

Line 3 - Point velocity measurements (type £ 7).

Position:

01 -04 vertical number + only for first point

05 -12 distance from reference point + in vertical water depth

13 -20 water depth + is required, else 0.

21 -25 measuring depth (relative depth for types < 7, actual depth for type = 7)

26 -30 number of rotations

31 -35 duration of single point measurement

36 -40 airline length +

41 -45 vertical angle + in case of airline length correction

46 -50 horizontal angle +

Line 2 - Moving boat (type ³ 8):

Position

01 -08 distance from reference point

09 -16 width of river

17 -24 width according to moving boat measurements

25 -32 level of gauge zero

33 -40 water level (rel. to gauge zero) at start of measurement

41 -48 water level at end of measurement

49 -56 current meter depth

57 -63 water level difference with downstream station, only required if backwater correction is required, else 0.

64 -72 coefficient in power profile

Line 3 - Moving boat (type ³ 8)

Position

01 -04 vertical number + only for first point

05 -12 distance from reference point + in vertical water depth

13 -20 water depth + is required, else 0.

21 -25 angle (type=8) or boat velocity (type=9)

26 -30 number of rotations

31 -35 duration of measurement