

UmAquo

UmAquo Metingen

This page provides an overview of the data exchange formats available to FEWS for exchanging UmAquo timeseries data.

Import formats

- [CSV Import](#): UmAquo CSV import format
- [XML Import](#): UmAquo XML import format
- Server Import: UmAquo import from webservice
- [WQ-CSV Import](#): WQ CSV import format

Export formats

- [CSV Export](#) : UmAquo CSV export format
- [XML Export](#) : UmAquo XML export format

Update UMAquo parameter tables

The UMAquo imports and exports use parameter tables to check the correctness of the imported and exported data. These parameter tables can be downloaded from the Aquo server through a webservice and stored in the Delft-FEWS bin folder. A special module is made that can be used to download these parameter table schema's; this module can be executed as an external FEWS module through the General Adapter. [Attached](#) the module and FEWS configuration.