

19 Module Run Table Display

Overview

The Module Run Table Display (available since 2015.01) can show data imported using the `importCsvModuleRunTablesActivity` of the [05 General Adapter Module](#). The imported CSV files are stored in FEWS and can be displayed using a table viewer with sorting, filtering and column hiding functionality.

Configuration

To use the Module Run Table Display viewer, configure it as `<explorerTask>` in `Explorer.xml`. For example:

```
<explorerTask name="Module Run Table Display">
  <mnemonic>T</mnemonic>
  <displayConfigFileName>ModuleRunTableDisplay</displayConfigFileName>
  <toolbarTask>true</toolbarTask>
  <menubarTask>true</menubarTask>
  <accelerator>ctrl T</accelerator>
  <toolWindow>false</toolWindow>
  <loadAtStartup>true</loadAtStartup>
  <onFailWarnAndContinue>false</onFailWarnAndContinue>
</explorerTask>
```

In the `DisplayConfigFiles` directory a `ModuleRunTableDisplay.xml` file needs to be created:

```
<?xml version="1.0" encoding="UTF-8"?>
<moduleRunTableDisplay xmlns="http://www.wldelft.nl/fews"
  xmlns:xsi="http://www.w3.org/2001/XMLSchema-instance"
  xsi:schemaLocation="http://www.wldelft.nl/fews https://fewsdocs.deltares.nl/schemas/version1.0
/moduleRunTableDisplay.xsd"/>
```

Displaying Content

To display the data a topology node has to be selected that maps to the run that imports the csv. After selecting the node the Module Run Table Display will appear. On top of the display is a list with csv files that have been selected. Default the first file will be displayed. Clicking on any file will display the imported csv content.

Filtering


Tables can be filtered by double clicking on a cell entry. Only records with the same entry for the selected column will be displayed. The selected entry will be highlighted (blue). Double clicking another entry will expand the filter. To undo the filtering the highlighted column has to be double clicked again.

The screenshot shows the BPA-HERMES Data Management Framework (Stand alone) interface. The main window displays a table of solution data. The table has columns: Solution #, Priority, Goal, Solution Index, Solution Type, Objective, Iteration, Statement ID, # Frozen Constraints, # Frozen Variables, Priority2, and Goal2. The 'Goal' column is highlighted in blue, indicating that the data is filtered by this column. The table contains 60 rows of data, all with '20 Tribs Minimum Flows' in the 'Goal' column. The 'Solution Type' column shows 'Repeated Maximin' for all rows. The 'Objective' column shows '100.0' for all rows. The 'Iteration' column shows values from 1 to 60. The 'Statement ID' column shows values from 1/20.1.1 to 39/20.1.1. The '# Frozen Constraints' column shows '2' for all rows. The '# Frozen Variables' column shows '0' for all rows. The 'Priority2' column shows '0' for all rows. The 'Goal2' column shows '0' for all rows. The interface includes a menu bar (File, Tools, Options, Help), a toolbar, and a sidebar with navigation options (Forecasts, CSV Import, Preparation, Real-Time, Short-Term). The status bar at the bottom shows system information: Rudie Ekkelenkamp, Current system time: 11-11-2013 12:00 PST, 07:17:19 GMT, 08:17:19 CET, Stand alone, -144.422, 37.291, 0.0 MB/s, 56 MB.

Solution #	Priority	Goal	Solution Index	Solution Type	Objective	Iteration	Statement ID	# Frozen Constraints	# Frozen Variables	Priority2	Goal2
22	20	Trib's Minimum Flows	21	Repeated Maximin	100.0	1/20.1.1	1	2	0	0	0
23	20	Trib's Minimum Flows	22	Repeated Maximin	100.0	2/20.1.1	2	2	0	0	0
25	20	Trib's Minimum Flows	24	Repeated Maximin	100.0	4/20.1.1	4	2	0	0	0
26	20	Trib's Minimum Flows	25	Repeated Maximin	100.0	5/20.1.1	5	2	0	0	0
28	20	Trib's Minimum Flows	27	Repeated Maximin	100.0	7/20.1.1	7	2	0	0	0
29	20	Trib's Minimum Flows	28	Repeated Maximin	100.0	8/20.1.1	8	2	0	0	0
30	20	Trib's Minimum Flows	29	Repeated Maximin	100.0	9/20.1.1	9	2	0	0	0
31	20	Trib's Minimum Flows	30	Repeated Maximin	100.0	10/20.1.1	10	2	0	0	0
32	20	Trib's Minimum Flows	31	Repeated Maximin	100.0	11/20.1.1	11	2	0	0	0
33	20	Trib's Minimum Flows	32	Repeated Maximin	100.0	12/20.1.1	12	2	0	0	0
34	20	Trib's Minimum Flows	33	Repeated Maximin	100.0	13/20.1.1	13	2	0	0	0
35	20	Trib's Minimum Flows	34	Repeated Maximin	100.0	14/20.1.1	14	2	0	0	0
36	20	Trib's Minimum Flows	35	Repeated Maximin	100.0	15/20.1.1	15	2	0	0	0
37	20	Trib's Minimum Flows	36	Repeated Maximin	100.0	16/20.1.1	16	2	0	0	0
38	20	Trib's Minimum Flows	37	Repeated Maximin	100.0	17/20.1.1	17	2	0	0	0
39	20	Trib's Minimum Flows	38	Repeated Maximin	100.0	18/20.1.1	18	2	0	0	0
40	20	Trib's Minimum Flows	39	Repeated Maximin	100.0	19/20.1.1	19	2	0	0	0
41	20	Trib's Minimum Flows	40	Repeated Maximin	100.0	20/20.1.1	20	2	0	0	0
42	20	Trib's Minimum Flows	41	Repeated Maximin	100.0	21/20.1.1	21	2	0	0	0
43	20	Trib's Minimum Flows	42	Repeated Maximin	100.0	22/20.1.1	22	2	0	0	0
44	20	Trib's Minimum Flows	43	Repeated Maximin	100.0	23/20.1.1	23	2	0	0	0
45	20	Trib's Minimum Flows	44	Repeated Maximin	100.0	24/20.1.1	24	2	0	0	0
46	20	Trib's Minimum Flows	45	Repeated Maximin	100.0	25/20.1.1	25	2	0	0	0
56	20	Trib's Minimum Flows	55	Repeated Maximin	100.0	35/20.1.1	35	2	0	0	0
59	20	Trib's Minimum Flows	58	Repeated Maximin	100.0	38/20.1.1	38	2	0	0	0
60	20	Trib's Minimum Flows	59	Repeated Maximin	100.0	39/20.1.1	39	2	0	0	0

Column hiding

In case not all columns should be visible, right clicking on a value will show the "Set column visibility" menu. This allows a user to select or deselect columns that should be visible (at least one column has to remain visible). These settings will be stored in the user settings and will remain available after FEWS was restarted.

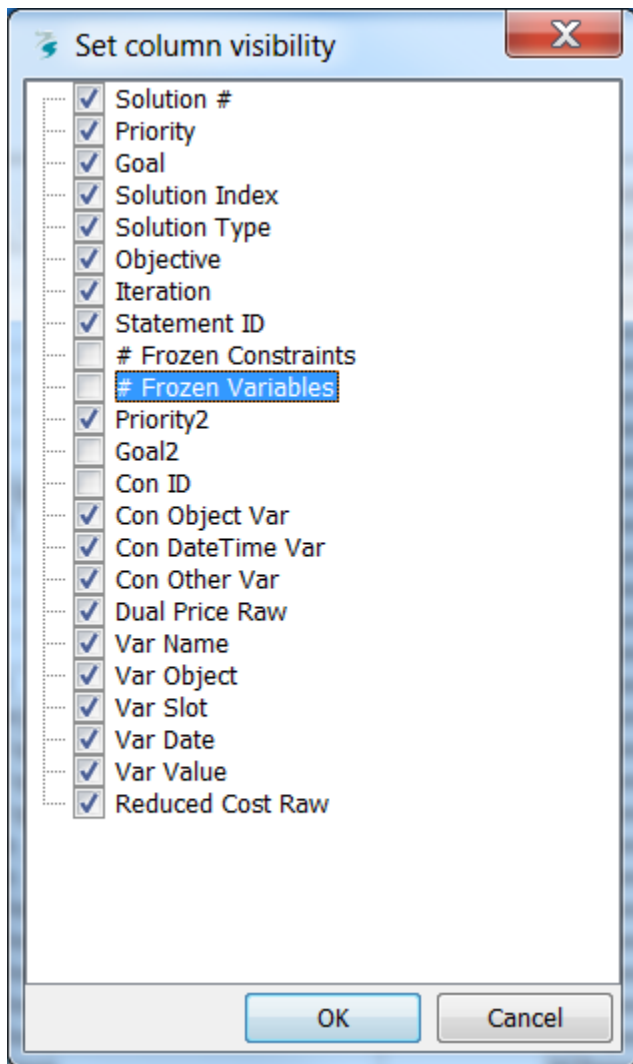

On fail configuration

Since 2019.02.

By design the activity will fail if the configured importFile is not found. To overrule this behaviour the following configuration option is available:

```
<onFailWarnAndContinue>true</onFailWarnAndContinue>
```

If onFailWarnAndContinue has been set to true, a warning will be logged if the configured importFile cannot be found, but the activity won't fail.